


Shutdown Procedure

Before shutting down: select Neutral and apply the Park Brake.




This bus is fitted with an electronic parking brake (EPB). To apply the parking brake, pull the lever up. When the park brake is applied, the park symbol within the lever will illuminate **RED** and the park warning light will show in the telltale display on the instrument binnacle.

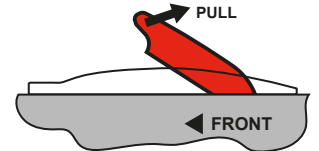

⚠ WARNING: In the event of electrical failure, the Electronic Parking Brake will not respond. Wheel chocks **MUST** be used to prevent runaway.

To shut down the bus, press the lower part of the Start/Stop switch on the left side of the binnacle. Switch will flash during power-down, wait before proceeding.

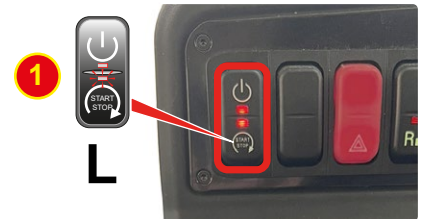

Turn off Master Switch on the right hand side of the binnacle: Press and release the bottom of the switch to turn off the master switch. Switch will flash during power-off.




DO NOT switch off the master switch while the bus is running.

Emergency Stop Locations

Emergency Stop: Driver's Cab

If possible, stop vehicle before operating. Switch is in the side console towards the back of the driver's seat. Lift cover and push toggle to perform an emergency shutdown.

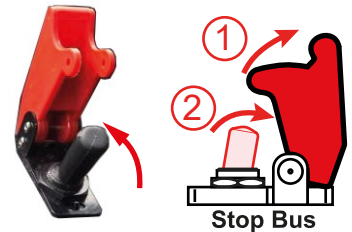


Emergency Stop: Rear External Emergency switch

If possible, stop vehicle before operating. Switch is located at the rear on the right hand corner. Twist and hold switch clockwise to perform an emergency shutdown.



Emergency Stop: Rear Drive Bay

If possible, stop vehicle before operating. Lift cover: **CAUTION:** gas struts on lid. Push stop button for emergency shutdown.

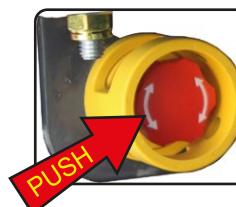

Entrance & Exit doors emergency operation

To open a door from outside:


Push the emergency button located near the edge of the doors.



To open a door from inside:

Use the emergency button located near the top edge of either door opening.

Lift the flap and push the button to release the doors.

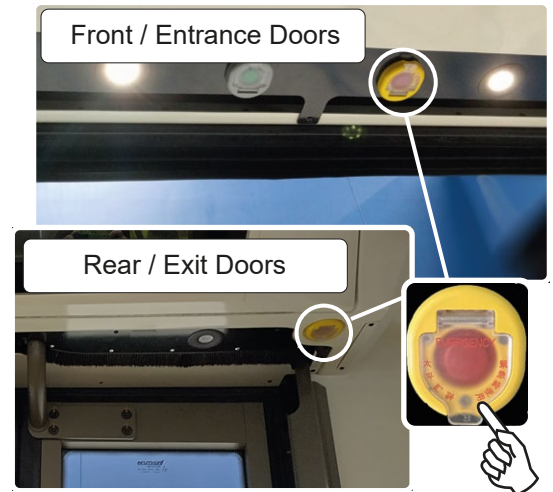

If the doors do not operate they can be pushed open manually.

Centre / Exit doors:

Pull the door outwards using the handle at the bottom then slide the doors open.



Front/entrance doors:

Push the outer edge inwards, then pivot the door into the bus.



24V Battery access

Battery access is via a lift-up flap at the front, below the driver's cab.

Lift the flap and release the antiluce fasteners, then slide the tray out to access the connections.

